



LI 08014/A

ES Instrucciones para la instalación, el uso, el mantenimiento

EN Installation, use and maintenance instructions

ÍNDICE

PRECAUCIONES DE SEGURIDAD
INSTALACIÓN
USO DE LA LAVADORA
MANTENIMIENTO Y LIMPIEZA
ESPECIFICACIONES
FICHA DE PRODUCTO

PRECAUCIONES DE SEGURIDAD

- Si el cable de alimentación eléctrica está dañado, debesolicitar al fabricante, al servicio de mantenimiento o a otras personas cualificadas que lo sustituyan para evitar posibles peligros.
- Deben utilizarse los nuevos juegos de mangueras suministrados con el aparato y los juegos de mangueras antiguos no deben ser reutilizados.
- Esta lavadora solo se debe utilizar en interiores.
- Las aberturas no deben estar obstruidas por una alfombra.
- (Advertencia exclusiva para el mercado EUROPEO) Este electrodoméstico lo pueden usar niños a partir de 8 años y personas con capacidades físicas, sensoriales o mentales reducidas o con falta de experiencia y conocimiento siempre y cuando cuenten con la supervisión o las instrucciones necesarias relativas al uso seguro del aparato y comprendan los peligros que este entraña. Los niños no deben jugar con el aparato. Los niños no deben realizar las tareas de limpieza y mantenimiento sin supervisión.
- (Advertencia no aplicable para el mercado EUROPEO) Este electrodoméstico no está diseñado para ser utilizado por personas (incluidos niños) con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimiento sin la supervisión o las instrucciones necesarias relativas al uso seguro del aparato por parte de una persona responsable de su seguridad. Los niños deben ser supervisados para garantizar que no juegan con el electrodoméstico.
- Desconecte el enchufe de la toma de corriente antes de realizar tareas de limpieza o mantenimiento.
- Asegúrese de que todos los bolsillos están vacíos.

PRECAUCIONES DE SEGURIDAD

- Los artículos afilados y rígidos como monedas, broches, clavos, tornillos, piedras, etc., pueden causar daños graves a esta máquina.
- Desconecte el aparato de la corriente eléctrica y corte el suministro de aqua tras su funcionamiento.
- Compruebe que el agua del tambor se ha drenado correctamente antes de abrir la puerta. No abra la puerta si puede ver agua dentro.
- Los animales y los niños podrían subirse y meterse en la máquina. Compruebe la máquina antes de cada puesta en marcha.
- Durante el funcionamiento, la puerta de vidrio puede alcanzar temperaturas muy altas. Asegúrese de que los niños y las mascotas no se acercan a la máquina durante su funcionamiento.
- Compruebe que la frecuencia y el voltaje son idénticos a los que necesita la lavadora.
- No utilice ninguna toma de corriente con una tensión nominal inferior a la de la lavadora. No desenchufe nunca el cable de alimentación con las manos mojadas.
- Para garantizar su seguridad, debe conectar la máquina a un enchufe con toma de tierra (con tres polos). Compruebe detenidamente y asegúrese de que el enchufe que va a utilizar está en buen estado y tiene una toma de tierra adecuada.
- Los niños menores de 3 años deberían mantenerse a una distancia segura, a menos que estén bajo continua supervisión.
- Los niños deben ser supervisados para garantizar que no juegan con el electrodoméstico.
- Los materiales empleados en el embalaje pueden ser peligrosos para los niños.
 - Conserve todos los materiales de embalaje (bolsas de plástico, espumas, etc.) lejos de los niños.
- La lavadora no debe instalarse en cuartos de baño o en cuartos muy húmedos, así como tampoco en cuartos con gases explosivos o cáusticos.

PRECAUCIONES DE SEGURIDAD

- Asegúrese de que un técnico cualificado lleva a cabo la conexión del agua y de los dispositivos eléctricos de acuerdo con las instrucciones del fabricante y con las normas de seguridad locales.
- Antes de poner la máquina en marcha, debe retirar el embalaje y los pernos de transporte. Si no lo hace, la lavadora podría quedar seriamente dañada al lavar la ropa.
- Antes de lavar la ropa por primera vez, la lavadora debe realizar un ciclo completo de todos los procedimientos sin la ropa dentro.
- Las lavadoras con una sola válvula de entrada solo pueden conectarse al suministro de agua fría. Las lavadoras con dos válvulas de entrada pueden conectarse al agua tanto fría como caliente.
- La lavadora ha sido diseñada para uso doméstico y para tejidos aptos para su lavado a máquina.
- Está prohibido el uso de disolventes inflamables, explosivos o tóxicos. No se debe usar gasolina, alcohol, etc., como detergente.
 Seleccione solo los detergentes adecuados para el lavado a máquina, especialmente para el tambor.
- Está prohibido lavar alfombras.
- Tenga cuidado de no quemarse cuando la lavadora drene el agua caliente del lavado.
- Nunca rellene el agua a mano durante el lavado.
- Una vez finalizado el programa, espere dos minutos para abrir la puerta.
- Recuerde desconectar el agua y el suministro eléctrico inmediatamente después de lavar la ropa.

PRECAUCIONES DE SEGURIDAD

- No se suba ni se siente en la cubierta superior de la máquina.
- No se apoye en la puerta de la máquina.
- No emplee una fuerza excesiva para cerrar la puerta. Si le resulta difícil cerrar la puerta, compruebe no haber superado el límite de ropa permitido o que esta haya quedado bien distribuida.
- Precauciones durante la manipulación de la máquina
 - 1.Los pernos de transporte deben ser reinstalados en la máquina por una persona especializada.
 - 2.El agua acumulada se evacuará de la máquina.
 - 3. Manipule la máquina con cuidado. Nunca sostenga las piezas que sobresalen de la máquina mientras la levanta. La puerta de la máquina no se puede utilizar como asa durante el transporte.
- Nota sobre la eliminación:

Esta marca indica que este producto no debe desecharse con otros residuos domésticos en la UE. Para evitar posibles daños al medio ambiente o a la salud humana derivados de la eliminación incontrolada de residuos, recíclelo de forma responsable para promover la reutilización sostenible de los recursos materiales. Para devolver el dispositivo usado, utilice los sistemas de recogida o póngase en contacto con el distribuidor que le vendió el producto. Ellos lo recogerán y se encargarán de hacer un reciclaje seguro desde el punto de vista medioambiental.



INSTALACIÓN

La instalación debe llevarla a cabo personal cualificado para la manipulación de aparatos eléctricos y con los conocimientos suficientes de fontanería.

TRANSPORTE

Este electrodoméstico es muy pesado. Manipúlelo con cuidado con la ayuda de otras personas. No sujete la lavadora por la puerta, ya que ésta no soportaría el peso.

Para desplazar la lavadora deben estar montados los tornillos de anclaje de la parte posterior. Si ya los ha retirado y desea mover la lavadora contacte con un profesional competente para que vuelva a colocarlos.

Drene todo el agua que pueda contener la lavadora antes de desplazarla.

DESEMBALAJE


Cuando reciba la lavadora compruebe que el embalaje está en perfecto estado y que se incluyen todos los accesorios y comuníquelo inmediatamente al establecimiento donde la adquirió en caso contrario.

Retire todo el embalaje y cintas de sujección tanto del exterior como del interior de la lavadora y el cajón de detergente.

No permita que los niños jueguen con el embalaje ya que podría resultar peligroso para ellos.

Deseche todo el material de embalaje para su recogida selectiva en un punto limpio de su localidad.

DESCRIPCIÓN

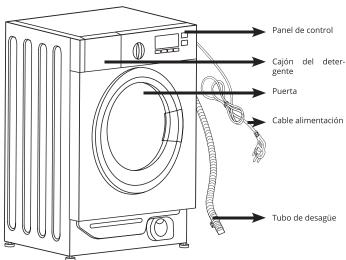


ACCESORIOS:



Tapas tornillos de transporte



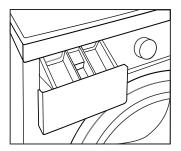

EMPLAZAMIENTO

Antes de instalar la lavadora tome las siguientes consideraciones para seleccionar un emplazamiento adecuado:

Elija una superficie rígida, seca y nivelada

Evite la exposición directa a los rayos de sol u otras fuentes de calor

La estancia debe estar suficientemente ventilada La temperatura ambiente debe superar los 0°C

No instalar en lugares húmedos o con presencia de gases inflamables

Asegúrese de que el cable no quede aprisionado por la lavadora

Las aberturas de ventilación deben estar siempre libres. No instalar sobre alfombras o moquetas

- CONSULTE LAS INSTRUCCIONES DE ENCASTRE ANEXAS -


TORNILLOS DE FIJACIÓN DEL TAMBOR

Retire los tornillos de fijación del tambor de la parte trasera de la lavadora (sólo útiles para el transporte):

Afloje los tornillos con una llave y destorníllelos.

Ponga en su lugar las tapas que se suministran.

Guarde los tornillos para poder desplazar la lavadora en el futuro sin dañarla.

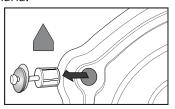


AJUSTE DE LAS PATAS

La lavadora debe estar perfectamente nivelada y todas sus patas en contacto con el suelo.

Presione una por una las 4 esquinas superiores y verifique que la lavadora no cede en ninguno de estos 4 puntos al presionar. De esta forma sabrá que las 4 patas apoyan en el suelo.

Coloque una lata de refresco tumbada sobre cada esquina y compruebe que la lata no rueda. De esta forma comprobará que la lavadora está nivelada horizontalmente.

Si comprueba que la lavadora no está bien apoyada o nivelada ajuste las patas atornillándolas o desatornillándolas hasta asegurar la posición de la lavadora.

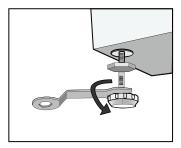


CONEXIÓN DE LA TOMA DE AGUA



Utilice únicamente el tubo de toma de agua suministrado y deseche el antiguo.




Cónéctese únicamente a un grifo de agua fría, nunca a uno de agua caliente.

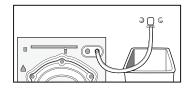

Conecte el extremo del tubo en forma de codo al grifo correspondiente enroscándolo en el sentido de las agujas del reloj (el grifo debe estar por encima de la toma de agua de la lavadora)

Atornille firmemente el otro extremo del tubo en la toma de agua de la parte posterior de la lavadora.

Si cuando ponga en funcionamiento la lavadora observa algún escape en estos puntos compruebe que la fijación es correcta y aprete las roscas en lo posible. El grifo ha de ser estándar. Si no lo es sustitúyalo por uno estándar.

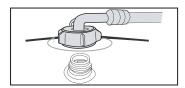


CONEXIÓN DEL TUBO DE DESAGÜE

Puede conectar el tubo de desagüe directamente a un desagüe o a una pila con desagüe:

El desagüe debe estar a un metro de altura como máximo. El extremo del tubo no debe guedar sumergido.

Evite derrames y filtraciones que podrían dañar el suelo. Haga la instalación de acuerdo con el siguiente gráfico:

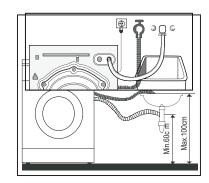

CONEXIÓN ELÉCTRICA



Antes de enchufar la lavadora a la corriente eléctrica tenga en cuenta las siguientes consideraciones:

Asegúrese de que la corriente suministrada no supere los 10Ah

Compruebe que su instalación de energía eléctrica corresponde con los requerimientos de la etiqueta de la lavadora. Asegúrese de que el enchufe dispone de toma de tierra.

No utilice ladrones ni alargadores.

No toque el cable ni el enchufe con las manos mojadas.

Para enchufar y desenchufar sujete el cable por el enchufe. Si el cable está dañado contacte con un servicio técnico oficial de Schneider para su remplazo.

Utilice para la lavadora un circuito independiente de otros aparatos eléctricos.

Desenchufe siempre la lavadora antes de su limpieza o mantenimiento.

USO DE LA LAVADORA

ANTES DE USAR LA LAVADORA

- Desenchufe la lavadora y desconecte su suministro de agua cuando no la use.
- Nunca se suba a la lavadora, aunque esté apagada.
- No se apoye ni ejerza presión sobre la puerta de la lavadora
- Ponga un ciclo de lavado sin ropa y con un poco de detergente antes del primer uso.
- · Compruebe los filtros antes de cada lavado

CAPACIDAD DE CARGA DE LA LAVADORA


Compruebe la siguiente tabla donde podrá informarse de la maxima capacidad de carga en seco en función del tipo de ropa para asegurar una larga vida útil de su lavadora y una mayor eficiencia de lavado:

TIPO DE ROPA	MÁXIMA CARGA (KG)
Algodón	8 kg
Sintéticos	4 kg
Lana	2 Kg
Delicados	2.5 Kg



Nunca sobrecargue la lavadora

GUÍA RÁPIDA

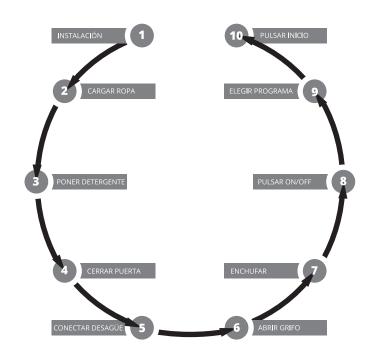

USO DE LA LAVADORA

PREPARACIÓN DE LA ROPA

Puede comprobar si una prenda decolora mojando un paño blanco en detergente y frontado ligeramente una esquina en la prenda. Si el color de la prenda se transfiere parcialmente al paño puede concluir que la prenda decolora. Lave la ropa que decolore separadamente.

En todo caso siga las instrucciones de la etiqueta de la ropa. Compruebe en dicha etiqueta que la ropa en cuestión puede ser lavada a máquina y a qué temperatura.

Vacíe todos los bolsillos de la ropa a lavar.

Frote ligeramente con detergente los cuellos y mangas de camisa, bordes de los bolsillos y otras partes con suciedad persistente antes de ponerlos en la lavadora.

Ciertas prendas son sensibles a la temperatura y pueden sufrir daños irreversibles en caso de ser expuestos a temperaturas altas. Tome las debidas precauciones.

No lave alfombras en la lavadora


No lave a máquina corbatas, abrigos y colchas de plumas, ni otras prendas muy delicadas.

No lave en la lavadora prendas impermeables como chubasqueros, trajes de neopreno, botas de agua, etc.

No ponga en la lavadora prendas manchadas con sustancias inflamables como gasolina, queroseno, alcohol o disolventes.

Retire broches, hebillas, pins, etc. antes de poner la lavadora.

Haga por separado la colada de ropa blanca y de color. Siga siempre las instrucciones de las etiquetas de acuerdo a los siguientes símbolos:

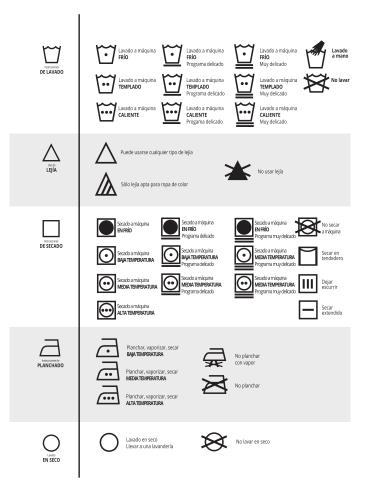

Cierre cremalleras y botones antes de poner la lavadora. Es recomendable lavar los sujetadores dentro de una funda de almohada para que los aros no dañen la lavadora. Ponga la ropa especialmente delicada en una bolsa para

Ponga la ropa especialmente delicada en una bolsa para lavarla. No lave sola una única prenda pesada (como toallas gran-

des o vaqueros) porque podría desequilibrar la lavadora. Ponga más prendas para que la lavadora pueda hacer una distribución adecuada de la carga.

Lave aparte la ropa de bebé con detergentes especiales para ello. Use aclarado extra para eliminar completamente el detergente.

Retire polvo, pelusa, pelos, etc. de la ropa antes de lavarla

DETERGENTES

En función del tipo de colada que quiera hacer (ropa delicada, ropa de color, prendas de bebé, etc.) deberá elegir un detergente y/o suavizante adecuados para cada caso. Use siempre detergentes específicos para lavado a máquina.

No ponga demasiado detergente en la lavadora. El exceso de espuma puede provocar accidentes. En caso de exceso de detergente, o si usa detergente en polvo, o si usa un programa de agua fría, es probable que queden restos de detergente en la ropa y la propia lavadora. Asegúrese de que se haga suficiente aclarado y centrifugado para eliminar todos los restos de detergente.

Limite al máximo el uso de lejía, ya que puede dañar la ropa por su composición alcalina.

Siga siempre las recomendaciones del fabricante



Mantenga siempre a los niños alejados del detergente

PREPARACIÓN DE LA LAVADORA

Compruebe que los tubos de suministro de agua y de desagüe están correctamente instalados.

Abra el grifo de suministro de agua.

Ponga la ropa en la lavadora (vea el cuadro de programas para saber la carga máxima de ropa admitida en cada caso) Cierre la puerta hasta que oiga un clic. Si hay demasiada ropa y la puerta no se cierra bien, no trate de forzar la puerta. Extraiga algunas prendas y distribuya homogéneamente las que queden dentro para cerrar la puerta correctamente.


Ponga detergente en el cajón como se indica a continuación:

I. Detergente prelavado

II. Detergente normal

Suavizante y/o quitamanchas

Use el detergente adecuado a cada caso Añada un poco de agua al detergente en polvo No supere la cantidad de detergente que establece la marca del caión

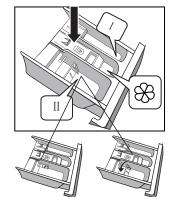

Enchufe la lavadora y pulse el botón *ON/OFF*Seleccione si lo desea alguna función especial
Seleccione el programa de lavado
Pulse *START/PAUSE* para iniciar el programa de lavado

MANTENIMIENTO Y LIMPIEZA



Desenchufe la lavadora y cierre el grifo de suministro de agua antes de cualquier mantenimiento.



No utilice disolventes, ya que pueden dañar la lavadora y generar gases peligrosos.



Este es un aparato eléctrico. Nunca arroje agua sobre la lavadora para limpiarla.



No utilice limpiadores que contengan PCMX o ácido fórmico ni sus derivados o equivalentes.

Un correcto mantenimiento de su lavadora puede aumentar notablemente su vida útil. Por ello le recomendamos que siga con atención las siguientes instrucciones de mantenimiento y limpieza:

LIMPIEZA

Limpieza de la superficie


Use un paño limpio humedecido en agua con detergente neutro para limpiar la superficie de la lavadora. No deje que gotee el agua y séquelo inmediatamente con otro paño. No utilice estopajos o herramientas que puedan arañar la superficie.

Limpieza del tambor


El lavado de prendas con partes metálicas u objetos olvidados en los bolsillos pueden dejar restos de óxido en el tambor. Límpielos inmediatamente con detergentes libres de cloro y sin usar productos abrasivos ni estropajos.

Limpieza del cajón de detergente


1. Abra el cajón y pulse donde indica la flecha:

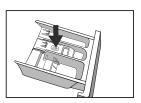

2. Sin soltar, tire hacia arriba del clip y saque la tapa del compartimento del suavizante.

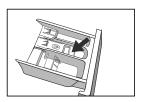


3. Extraiga el cajón del detergente y lávelo íntegramente con agua

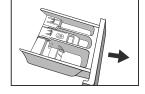


Limpieza del filtro de toma de agua


Limpie con frecuencia el filtro de la toma de agua para asegurar un suministro suficiente de agua. Para ello siga el siguiente procedimiento:

- a) Filtro del grifo
- 1. Cierre el grifo de agua y ponga el programa de centrifugado durante 40 segundos y después cancélelo
- 2. Desenrosque el tubo de toma de agua del grifo
- 3. Lave el filtro con agua

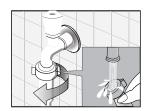

- 4. Vuelva a conectar el tubo al grifo
- b) Filtro de la lavadora
- 5. Desenrosque el tubo de toma de agua de la lavadora

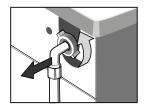

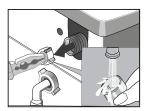


- **7.** Vuelva a colocar en su sitio el filtro y enrosque el tubo de nuevo a la toma de la lavadora.
- 8. Abra de nuevo el grifo para comprobar que no haya fugas.
- Por último cierre el grifo hasta que desee utilizar la lavadora de nuevo.

Limpieza del filtro de la bomba de drenaje


Limpie con frecuencia el filtro de la bomba de drenaje ya que suele acumular suciedad de la ropa y puede provocar mal olor e incluso bloquear la lavadora.

Inspeccione el filtro si la lavadora no centrifuga o no evacúa el agua. La lavadora podría hacer ruidos extraños durante el drenaje del agua si el filtro está parcialmente bloqueado por algún pequeño objeto metálico como una moneda o un pin. Para limpiar el filtro siga los siguientes pasos:


- 1. Desenchufe la lavadora
- **2.** Retire el panel embellecedor del mueble de la parte inferior frontal de la lavadora.

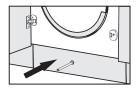

3. Desenrosque el filtro y extráigalo como se indica en el esquema:

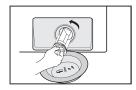

4. Limpie el filtro y vuelva a colocar todo en su sitio:

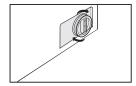

Durante el lavado se filtra agua caliente, por lo que debe esperar a que el agua se enfríe antes de extraer el filtro.

Una vez recolocado en su sitio asegúrese de esté bien cerrado para evitar escapes de agua.

MANTENIMIENTO

Qué hacer en caso de congelación

La lavadora debe ser instalada en interiores y la temperatura ambiente debe estar siempre por encima de los 0°C, pero si se congela el agua de la lavadora siga los siguientes pasos para descongelarla:


- 1. Desenchufe la lavadora
- **2.** Lave el grifo con agua caliente hasta que pueda desenroscar el tubo de toma de agua sin dificultad
- 3. Extraiga el tubo de toma de agua y sumérjalo en agua caliente
- **4.** Con ayuda de una jarra introduzca agua caliente en el tambor
- 5. Espere 10 minutos
- **6.** Vuelva a conectar el tubo de toma de agua y compruebe que el agua circula libremente tanto por el tubo de toma de agua como por el de salida de agua y no hay escapes
- **7.** Asegúrese de que la temperatura ambiente está por encima de los 0°C y ponga un programa de lavado que no sea en frío.

Vaciar el tubo de toma de agua

- 1. Cierre el grifo
- 2. Desconecte el tubo de toma de agua del grifo y ponga ese extremo en un contenedor adecuado o desagüe
- **3.** Ponga cualquier programa menos el de *Drenaje delicados*. La lavadora expulsará el agua y se detendrá a los 40 seg.
- **4.** Vuelva a conectar el tubo al grifo.

Vista general


Antes de instalar la lavadora, lea estas instrucciones sobre cómo empotrar el aparato y guárdelas para consultarlas en un futuro. Este electrodoméstico ha sido diseñado para empotrarse en un mueble de cocina. El hueco debe tener las dimensiones que se muestran en la imagen.

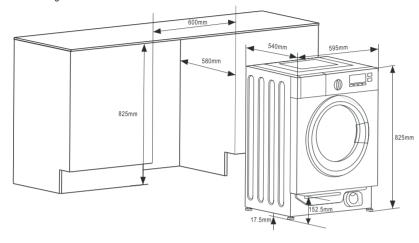


Al instalar el electrodoméstico en la cocina, asegúrese de que, si es posible, las mangueras quedan colocadas en uno de los dos huecos que encontrará en la parte trasera. Esto evitará que puedan quedar presionadas o retorcidas.

Preparación y montaje de la puerta

El electrodoméstico está preparado para el montaje con una puerta que abra de derecha a izquierda o de izquierda a derecha.

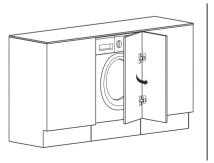

La puerta abre de izquierda a derecha

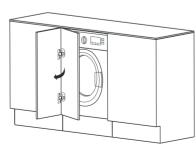

La puerta abre de derecha a izquierda

■ Apéndice

- 1.Tornillos autorroscantes (ST4*12)
- 2. Tornillos autorroscantes (M5*12)
- 3.Bisagra
- 4.Contraimán

Herramientas

1.Destornillador 2.Destornillador automático 3.Regla 4.Lápiz


- 5.Tope
- 6.Papel guía para la instalación






■ Preparación del papel guía para la instalación

1. Haga una marca en la puerta teniendo en cuenta la altura del armario y de la lavadora.

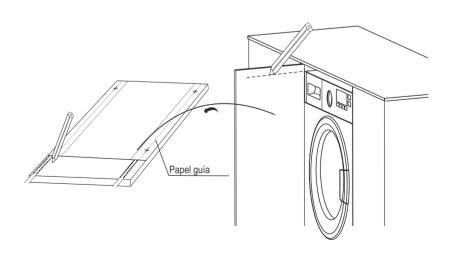

Empotrado

2. Colocación del papel en la puerta

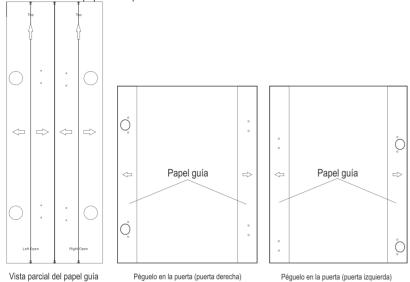


Perforación del orificio en la puerta

1.Taladre el orificio en la puerta teniendo en cuenta las indicaciones del papel guía.


2.Instalación de las bisagras y el tope

Fije las bisagras a la máquina mediante los tornillos ST4*12. Las bisagras se pueden ajustar para compensar una posible diferencia de grosor de la puerta.

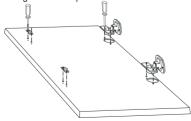


Instalación del contraimán

El electrodoméstico está preparado para la instalación de un cierre magnético. Para que el sistema de cierre funcione correctamente, debe atornillar el espaciador en la parte interior de la puerta.

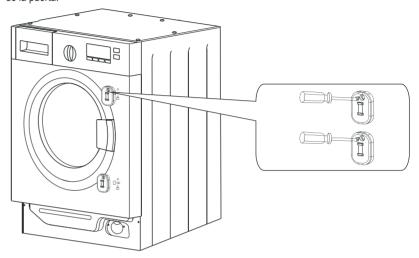

■ Instalación de la puerta

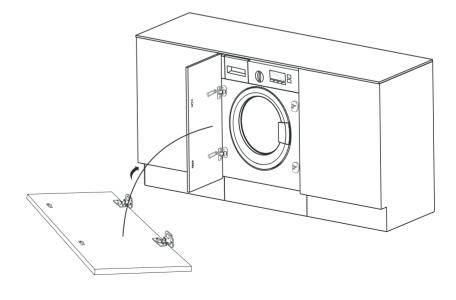

CONTENTS

	NSTRUCTIONS Gafety Instructions
INSTALLA	TION
	Product Descriptionnstallation
OPERATIO	DNS
	Quick Start
■ B	Before Each Washing
	Detergent Dispenser
	Control Panel
= 0)ption
	ther Functions
	Programmes
	Vashing Programmes Table
MAINTEN	ANCE
■ (Eleaning And Care
■ T	rouble Shooting
	echnical Specifications
	Product Fiches
	Built-in installation

Safety Instructions

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury or loss of life. Explanation of the symbols:

⚠ Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

(!) Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

⚠ Warning!

The electric shock!

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Before any maintenance the device, unplug the appliance from the mains.

- Always unplug the machine and turn off the water supply after use. The max. inlet water pressure, in pascals. The min. inlet water pressure, in pascals.
- To ensure your safety, power plug must be inserted into an earthed three-pole socket. Check carefully and make sure that your socket is properly and reliably earthed.
- Make sure that the water and electrical devices must be connected by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.
- Pull out its plug from the power socket before cleaning or maintenance.
- Do not use any socket with rated current less than that of appliance. Never pull out power plug with wet hand.
- Please remember to disconnect water and power supply immediately after the clothes are washed.

Risk to children!

- EN countries: the appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be supervised to ensure that they do not play with appliance.
- Animals and children may climb into the machine. Check the machine before every operation.
- Kids should be supervised that they do not play with the appliance.

- Glass door may be very hot during the operation. Keep kids and pets far away from the machine during the operation very wet rooms as well as in the rooms with explosive or caustic gas.
- Remove all packages and transport bolts before using the appliance. Otherwise, serious damage may result.

Risk of explosion!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances(such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.) This may result in fire or explosion.
- The washer dryer is not to be used if industrial chemicals have been used for cleaning.
- The exhaust air must not be discharged into a flue which is for exhausting fumes from appliances burning gas or other fuels.
- Before hand thoroughly rinse items of washing by hand.

① Caution!

Installing the product!

- This appliance is for indoor use only.
- It isn't intended to be built-in using.
- The openings must not be obstructed by a carpet.
- The appliance shall not be installed in bath room or very wet rooms as well as in the rooms with explosive or caustic gases.
- The appliance with single inlet valve only can be connected to the cold water supply. The appliance with double inlet valves should be correctly connected to the

- hot water and cold water supply.
- Plug must be accessible after installation.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washer dryer.
- The appliance shall not be installed at a humid place.
- Remove all packages and transport bolts before using the appliance. Otherwise, serious damage may result.

Risk of damaging appliance!

- The product is only for home use and is only designed for the textiles suitable for machine washing and drying.
- Do not climb up and sit on top cover of the machine.
- Do not lean against machine door.
- Cautions during Handling Machine:
 - 1. Transport bolts shall be reinstalled to the machine by a specialized person.
 - 2. The accumulated water shall be drained out of the machine.
 - 3. Handle the machine carefully. Never hold each protruded part on the machine while lifting. Machine door can not be used as the handle during the conveyance.
 - 4. This appliance is heavy. Transport with care.
 - 5. That the hands shall not be inserted into running water extracting tub.
- Please do not close the door with excessive forces. If it is found difficult to close the door, please check if the clothes are put in or distributed well.
- It is forbidden to wash carpets.

Operating the appliance!

- Before using the wash machine, the product shall be calibrated.
- Before washing the clothes at first time, the product shall be operated in one round of the whole procedures without the clothes inside.
- Flammable and explosive or toxic solvents are forbidden. Gasoline and alcohol etc. Shall not be used as detergents. Please only select the detergents suitable for machine washing, especially for drum.
- Make sure that all pockets are emptied. Sharp and rigid items such as coin, brooch, nail, screw or stone etc. may cause serious damages to this machine.
- Please check whether the water inside the drum has been drained before opening its door. Please do not open he door if there is any water visible.
- Be careful of burning when the product drains hot washing water.
- After the program is completed, Please wait for two minutes to open the door(Some model).
- Never refill the water by hand during washing.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products. it be placed in a tumble dryer they should first be washed in hot water with extra detergent, this will reduce, but not eliminate, the hazard.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Do not dry unwashed items in the appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot with an extra amount of detergent before being dried in the appliance.


- Items such as foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- The machine whose lid can be opended during water extraction, that it takes 15s or more for complete stop of water extracting chamber tub.
- The final part of a washer dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches before use the appliance.
- WARNING: Never stop a washer dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Packaging/Old appliance



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.


Product Description

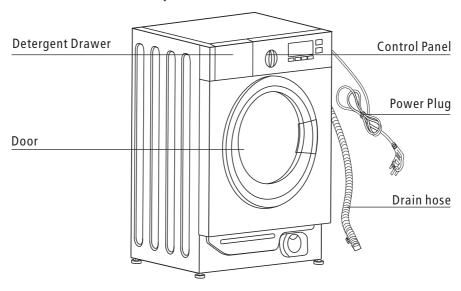

Note!

• The product line chart is for reference only, please refer to real product as standard.

Accessories

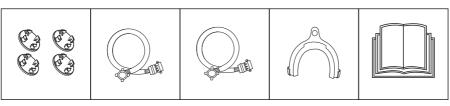

Transport hole plug

Supply hose cold water

Supply hose hot water (optional)

Drain hose support (optional)


Owner's manual

Installation

Installation area

⚠ Warning!

- Stability is important to prevent the product from wandering!
- Make sure that the product should not stand on the power cord.

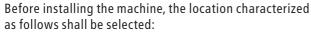

- 1. Rigid, dry, and level surface
- 2. Avoid direct sunlight
- 3. Sufficient ventilation
- 4. Room temperature is above 0°C
- 5. Keep far away from the heat resources such as coal or gas.

Unpacking the washing machine

⚠ Warning!

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation! Keep all packaging well away from children.
- 1. Remove the cardboard box and styrofoam packing.
- 2. Lift the washer dryer and remove the base packing. Make sure the small triangle foam is removed with the bottom one together. If not, lay the unit down with side surface, then remove the small foam from the unit bottom manually.
- 3. Remove the tape securing the power supply cord and drain hose.
- 4. Remove the inlet hose from the drum.

Remove transport bolts

🗥 Warning!

- You must remove the transport bolts from the backside before using the product.
- You'll need the transport bolts again if you move the product, so make sure you keep them in a safe place.

Please take the following steps to remove the bolts:

- 1.Loosen 4 bolts with spanner and then remove them.
- 2.Stop the holes with transport hole plugs.
- 3. Keep the transport bolts properly for future use.










Levelling the washer dryer

⚠ Warning!

- The lock nuts on all four feet must be screwed tightly against the housing.
- 1.Check if the legs are closely attached to the cabinet. If not, please turn them to their original positions tighten the nuts.
- 2. Loosen the lock nut turn the feet until it closely contacts with the floor.
- 3. Adjust the legs and lock them with a spanner, make sure the machine is steady.

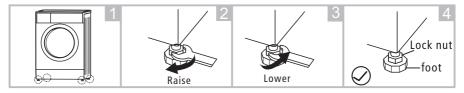

Connect Water Supply Hose

⚠ Warning!

- To prevent leakage or water damage, follow the instructions in this chapter!
- Do not kink, crush, modify or sever water inlet hose.
- For the model equips hot valve, connect it to hot water tap with hot water supply hose. Energy consumption will decrease automatically for some program.

Connect the inlet pipe as indicated, There are two ways to connect the inlet pipe. 1. Connection between ordinary tap and inlet hose.




Loosen clamp nut and Tighten clamp nut four bolts


Press slide bushing, insert inlet hose into connecting base

Connection finished

Connection between screw tap and inlet hose.

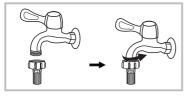

Tap with threads and inlet hose

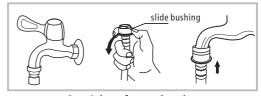

Special tap for washer dryer

INSTALLATION

Connect the other end of inlet pipe to the inlet valve at the backside of product and fasten the pipe tightly clockwise.




Drain Hose

- 🛆 Warning!


- Do not kink or protract the drain hose.
- Position drain hose properly , otherwise damage might result of water leakage.

There are two ways to place the end of drain hose:

1.Put it into the water trough.

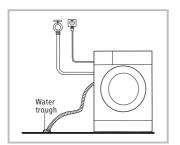



2.Connect it to the branch drain pipe of the trough.

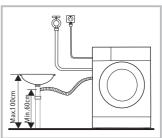

Note!

• If the machine has drain hose support, please install it like the following .

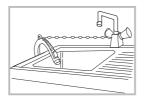

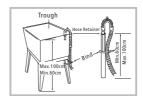

⚠ Warning!

- When installing drain hose, fix it properly with a rope.
- If drain hose is too long, do not force it into washing machine as it will cause abnormal noises.

Quick Start

① Caution!


- Before washing, please make sure it's installed properly.
- Before washing at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows.

Calibration

It's recommend to calibrate the wash machine so that can serve you better.

- 1- Empty the wash machine;
- 2- Plug in;
- 3- Power on the wash machine and press "Speed" and "Delay" at the same time within 10 seconds then display "t19"
- 4- Press ▷|| to start the wash machine and wait till display " * * * * "


1. Before Washing

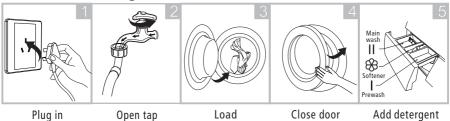

Note!

• Detergent need to be added in "case I "after selecting pre-washing for machines with this function.

2. Washing

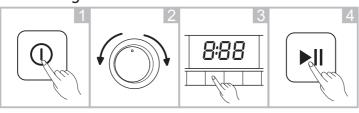

Power On Select Programme Select function or Start up default



Note!


- 1.If default is selected, step 3 can be skipped.
 - 2. The function button line chart is for reference only, please refer to real product as standard.

3. After Washing

Buzzer beep or "End" on display.

Before Each Washing

- The working condition of the washer should be(0-40)°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is placed under condition of 0°Cor less, then it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose are not frozen before use.
- Please check the labels and the explanation of using detergent before wash. Use non-foaming or less-foaming detergent suitable for machine washing properly.

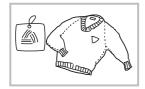


Check the label



Take out the items out of the pockets



Knot the long strips, zip or button

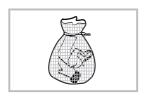

Put small clothes into the pillow slip



Turn easy-pilling and long-pile fabric inside out




Separate clothes with different textures

⚠ Warning!

- When washing a single clothes, it may easily cause great eccentricity and give alarm due to great unbalance. Therefore it is suggested to add one or two more clothes to be washed together so that draining can be done smoothly.
- Don't washing the clothes touching with kerosene, gasoline, alcohol and other flammable materials.

Detergent Dispenser

- I Pre wash detergent
- II Main wash detergent
- Softener 8

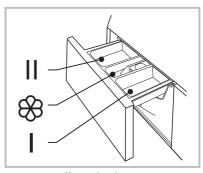

Pull out the dispenser

① Caution!


 Detergent only need to be added in "case I "after selecting pre-washing for machines with this function.

Programme	-	Ш	₩	Programme	- 1	Ш	₩
Quick 15			0	Baby Care	0		0
Rapid 45	0		0	Wool			0
20°C			0	Delicate			0
Jeans	0		0	Mixed	0	•	0
Eco 40-60			0	Synthetic	0		0
Intensive			0	Sports	0	•	0
Rinse&Spin			0	Cotton	0		0
Spin Only							
Means must		Me	ans optional				

Note!


- As for the agglomerated or ropy detergent or additive, before they are
 poured into the detergent box, it is suggested to use some water for
 dilution to prevent the inlet of detergent box from being blocked and
 overflowing while filling water.
- Please choose suitable type of detergent for the various washing temperature to get the best washing performance with less water and energy consumption.

Control Panel

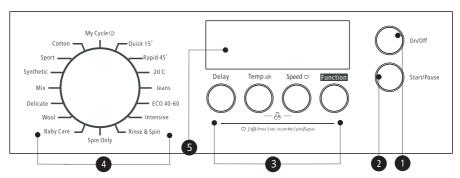

- Note!
- The chart is for reference only, Please refer to real product as standard.
- On/Off
 Product is switched on or off.
- 3 Option This allows you to select an additional function and will light when selected.
- 2 Start/Pause
 Press the button to start or pause the washing cycle.
- 4 Programmes Available according to the laundry type.
- 5 Display

 The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.

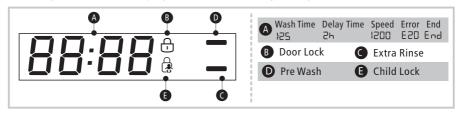

Option

Delay

Delay

Set the Delay function:

- 1. Select a programme
- 2. Press the Delay button to choose the time(the delaying time is 0-24 H.)

3.Press [Start/Pause] to commence the delay operation

0

>

>

Delay



On/Off

Choose the Programme

Setting time

Start

Cancel the Delay function:

Press the [Delay] button until the display be 0H.It should be pressed before starting the programme. If the programme already started, should press the [On/Off] button to reset the programme.

① Caution!

• If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, press the [On/Off]button the program will continues.

Pre Wash

Pre Wash

The Prewash function can get an extra wash before main wash.

Extra Rinse Extra Rinse

The laundry will undergo extra rinse once after you select it.

Programme	Option		Programme	Option		ņ	
	Delay	Pre Wash	Extra Rinse		Delay	Pre Wash	Extra Rinse
Quick 15	0			Baby Care	0	0	0
Rapid 45	0	0	0	Wool	0		0
20℃	0		0	Delicate	0		0
Jeans	0	0	0	Mixed	0	0	0
Eco 40-60	0			Synthetic	0	0	0
Intensive	0			Sports	0	0	0
Rinse&Spin	0		0	Cotton	0	0	0
Spin Only	0						

O Means optional

Other Functions

Memory the frequently used programmes

Press [\heartsuit]3sec. to memory the running programme. The default is cotton.

Child Lock
To avoid mis operation by children.



On/Off Start/Pause

Press [Temp.] and [Speed] 3 sec. till buzzer beep.

① Caution!

- Press the two button 3sec. also to be released the function.
- The "Child Lock" will lock all buttons except [On/Off].
- Cut off the power supply , the kid's protection is to be released.
- The child lock will remain effective when the power is resumed for some models.

Speed Speed

Press the button to change the spin speed.

Programme	Default Speed(rpm)		Programme	Default Speed(rpm)	
	1200	1400		1200	1400
Quick 15	800	800	Baby Care	800	800
Rapid 45	800	800	Wool	600	600
20°C	1000	1000	Delicate	600	600
Jeans	1000	1000	Mixed	800	800
Eco 40-60	1200	1400	Synthetic	800	1200
Intensive	800	800	Sports	800	800
Rinse&Spin	1000	1000	Cotton	800	1400
Spin Only	1000	1000			

① Caution!

• When the lights of speed are off means the spin speed is 0.

Temp.

Press the button to regulate the temperature(Cold,20°C,30°C, 40°C,60°C,90°C)

Mute the buzzer



On/Off Start/Pause Press the [Temp.]button for 3sec.the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.

① Caution!

• After Muting the buzzer function, the sounds will not be activated any more.

Programmes

Programmes are available according to thelaundry type.

Programmes		
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.	
Rapid 45'	Washing few and not very dirty clothes quickly.	
Synthetic	Wash synthetic articles, for example: shirts, coats, blending. While	
	washing the knitting textiles, detergent quantity shall be reduced	
	due to its loose string construction and easily forming bubbles.	
Baby Care	Washing the baby's clothes, it can make the baby's wear cleaner.	
	and make the rinse performance better to protect the baby skin.	
Jeans	Specially for jeans.	
Mixed	Mixed load consisting of textiles made of cotton and synthetics.	
20°C	Washing brightly colored clothes, it can protect the colors better .	
Sports	Washing the activewear.	
Quick 15'	Extra short programme approx, suitable for lightly soiled washing as	
	a small amounts of laundry.	
Delicate	For delicate, washable textiles, e.g. made of silk, satin, synthetic	
	fibres or blended fabrics.	
Wool	Hand or machine-washable wool or richwool textiles.Especially	
	gentle wash programme to prevent shrinkage, longer programme	
	pauses (textiles rest in wash liquor).	
Spin Only	Extra spin with selectable spin speed.	
Rinse&Spin	Extra rinse with spin.	
Eco 40-60	Washing brightly colored clothes, it can protect the colors better.	
	Default 40℃,not selectable,suitabale for laundry washing at	
	about 40°C-60°C.	
Intensive	To increase the washing effects, washing time is increased.	

Note!

• Reference to your product to select the programmes.

Washing Programmes Table

Programme	Washing/Drying Load (kg)	Temp.(°C)	Default Time(H)
	8.0	Default	8.0
	0.0	Delault	1400
Quick 15	2.0	Cold	0:15
Rapid 45	2.0	40	0:45
20°C	4.0	20	1:01
Jeans	8.0	60	1:45
Eco 40-60	8.0	-	3:35
Intensive	8.0	40	3:48
Rinse&Spin	8.0	-	0:20
Spin Only	8.0	-	0:12
Baby Care	8.0	60	1:43
Wool	2.0	40	1:07
Delicate	2.5	30	0:50
Mixed	8.0	40	1:20
Synthetic	4.0	40	3:18
Sports	4.0	40	1:11
Cotton	8.0	40	3:49

- Concerning to EN 60456:2016 With (EU)No.1061/2010,
 The EU energy efficiency class is: A+++
 Energy test program: Intensive; Speed: The highest speed; Temp.: 60°C/40°C;
 Other as the default. Half load for 8.0Kg machine: 4.0Kg.
- Concerning to EN 60456:2016/prA2019 With (EU)2019/2014, (EU)2019/2023, The EU energy efficiency class is: B
 Energy test program: ECO 40-60. Other as the default. Other as the default.
 Half load for 8.0Kg machine:4.0Kg.
 Quarter load for 8.0Kg machine:2.0Kg.

Note!

• The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

Cleaning And Care

⚠ Warning!

• Before your maintenance starts, please unplug the machine and close the tap.

Cleaning The Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use the wet cloth to wipe it off immediately. No sharp items are allowed.



Note!

 Formic acid and its diluted solvents or equivalent are forbidden, such as alcohol, solvents or chemical products, etc.

Cleaning The Drum

The rusts left inside the drum by the metal articles shall be removed immediately with chlorine-free detergents.

Never use steel wool.


Note!

• Don't put laundry in the washing machine during the drum cleaning.

Cleaning The Door Seal And Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leaks.

Remove any coins, buttons and other objects from the seal after each wash.

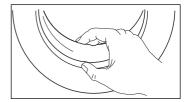

Cleaning The Inlet Filter



Note!

• Inlet filter must be cleaned if there is less water.

Washing the filter in the tap

- 1.Close the tap.
- 2. Remove the water supply hose from the tap.
- 3.clean the filter.
- 4. Reconnect the water supply hose.

Washing the filter in washer dryer:

- 1. Screw off the inlet pipe from the backside of the machine.
- 2.Pull out the filter with long nose pliers and reinstall it back after being washed.
- 3.Use the brush to clean the filter.
- 4. Reconnect the inlet pipe.











Note!

- If the brush is not clean, you can pull out the filter washed separately;
- Reconnect, turn on the tap.

Clean Detergent Dispenser

- 1. Press down the arrow location on softener cover inside the dispenser drawer.
- 2. Lift the clip up and take out softener cover and wash all grooves with water.
- 3. Restore the softener cover and push the drawer into position.



Pull out the dispenser drawer with press the A



Clean the dispenser drawer under water



Clean inside the recess with an old toothbrush



Insert the dispenser drawer




Note!

• Do not use alcohol, solvents or chemical products to clean the machine.

Cleaning Drain Pump Filter

⚠ Warning!

- Be careful of the hot water!
- · Allow detergent solution to cool down.
- Unplug the machine to avoid electrical shock before washing.
- Drain pump filter can filter the yarns and small foreign matters from the washing.
- Clean the filter periodically to ensure the normal operation of washing machine.

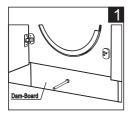

After the power is disconnected, pull out the Dam-Board.



Turn the filter down as shown with the figure and take out sundries matters.



Reinstall each part back after sundries matters are removed.

① Caution!

- Make sure that valve cap and emergency drain hose are reinstalled properly, cap
 plates should be inserted aligning to hole plates otherwise water may leak;
- Some machines don't have emergency drain hose, so step 2 and step 3 can be skipped.
 Rotate lower cover cap directly to make water run into basin.
- When the appliance is in use and depending on the programme selected there can
 be hot water in the pump. Never remove the pump cover during a wash cycle, always
 wait until the appliance has finished the cycle, and is empty. When replacing the
 cover, ensure it is securely re-tightened.

Trouble Shooting

The start of the appliance does not work or it stops during operation. First try to find a solution to the problem, If not, contact the service centre.

Description	Reason	Solution
Washer dryer cannot start up	Door is not closed properly	Restart after the door is closed Check if the clothes is stuck
Door can't be opened	Washer's safety protection design is working	Disconnect the power, restart the product
Water leakage	The connection between inlet pipe or outlet hose is not tight	Check and fasten water pipes Clean up outlet hose
Detergent residues in the box	Detergent is dampened or agglomerated	Clean and wipe the detergent box
Indicator or display does not light	Disconnect the power PC board or harness has connection problem	Check if the power is shut down and the power plug is connected correctly
Abnormal noise		Check if the fixing (bolts) have been removed Check it's installed on a solid and level floor


Description	Reason	Solution
E30	Door is not closed properly	Restart after the door is closed Check if the clothes is stuck
EIO	Water injecting problem while washing	Check if the water pressure is too low Straighten the water pipe Check if the inlet valve filter is blocked
E21	Overtime water draining	Check if the drain hose is blocked
E12	Water overflow	Restart the washer
EXX	Others	Please try again first, call up service line if there are still troubles

Note!

• After the check, activate the appliance. If the problem occurs or the display shows other alarm codes again, contact the service.

Technical Specifications

MAX.Current	10A
Standard Water Pressure	0.05MPa~1MPa

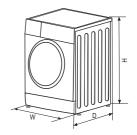

Model	Washing Capacity	Dimension (W*D*Hmm)	: 2	Rated Power
LI 08014/A	8.0kg	595*540*825	63kg	1950W

Product Fiches

Product fiche concerning to Regulation (EU) No 1061/2010

Trade mark	0
Model identifier	LI 08014/A
Rated capacity in kg of cotton laundry	8
Energy efficiency class on a scale from A+++ (most efficient) bis D (least efficient)	A+++
Energy consumption 157 kWh per year, based on 220 standard washing cycl	es for the standard
cotton programmes at 60 $^{\circ}\text{C}$ and 40 $^{\circ}\text{C}$ at full and partial load, and the consum	ption of the low-
power modes. Actual energy consumption will depend on how the appliance is	used.
Energy consumption of the standard 60°C cotton programme at full load	0.75kwh
Energy consumption of the standard 60°C cotton programme at partial load	0.66kwh
Energy consumption of the standard 40°C cotton programme at partial load	0.62kwh
Weighted power consumption of the off-mode	0.50W
Weighted power consumption of the left-on mode	1.00W
the standard cotton programmes at 60 °C and 40 °C at full and partial load. Act consumption will depend on how the appliance is used. spin-drying efficiency class B on a scale from G (least efficient) to A (most effic	
maximum spin speed	1400
Remaining moisture content	53%
'Intensive 60°C programme' and the "Intensive 40°C programme' are the standard washing programmes to which the information in the label and the fi programmes are suitable to clean normally soiled cotton laundry and that they programmes in terms of combined energy and water consumption.	· ·
Programme time of the standard 60°C cotton programme at full load	273min
Programme time of the standard 60°C cotton programme at half load	267min
Programme time of the standard 40°C cotton programme at half load	267min
duration time of left-on mode	-
Airborne acoustical noise emissions during washing phase	56dB
Airborne acoustical noise emissions during spinning phase	78dB
built-in' washing machine	yes

Supplier's name or trade mark: Supplier's address (b): Model identifier: LI 08014 /A General product parameters: Parameter Value Parameter Value Height 83 Dimensions in cm Rated capacity (a) (kg) 8.0 Width 60 Depth 54 В EEI_W (a) 60.0 Energy efficiency class (a) 1.04 Washing efficiency index (a) Rinsing effectiveness (g/kg) (a) Water consumption in litre per cycle, based Energy consumption in kWh per cycle, based on the eco 40-60 proon the eco 40-60 programme. Actual water gramme. Actual energy consump-0.545 con-sumption will depend on how the 48 tion will depend on how the appliappliance is used and on the hardness of the water. ance is used. Rated capacity 37 Rated capacity 53 Maximum temperature inside the Remaining moisture content (a) (%) Half 33 Half 53 treated textile (a) (oC) Quarter 23 Quarter 53 1400 Rated capacity Spin speed (a) (rpm) 1400 Spin-drying efficiency class (a) В Half 1400 Quarter Rated capacity 3:38 Programme duration (a) (h:min) 2:48 Type built-in Half 2:48 Quarter Airborne acoustical noise Airborne acoustical noise emis-76 emissions in the spinning phase (a) В sion class (a) (spinning phase) (dB(A) re 1 pW) Off-mode (W) 0.50 Standby mode (W) 1.00 4.00 N/A Delay start (W) (if applicable) Networked standby (W) (ifapplicable) Minimum duration of the guarantee offered by the supplier (b): This product has been designed to release silver ions NO during the washing cycle Additional information: Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2019/2023 (1) (b) is found:


⁽a) for the eco 40-60 programme.

⁽b) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.

^(°) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

■ Built-in installation


Appendix

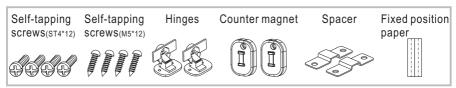


Tool




Install Steps

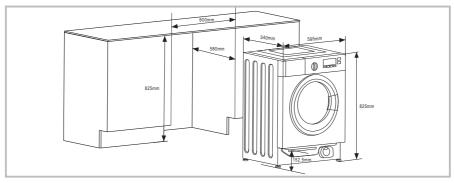


Overview

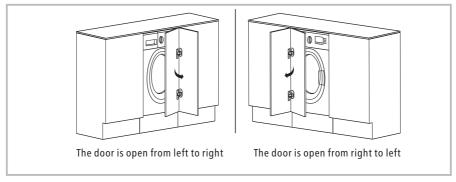


Preparation and assembly of the door

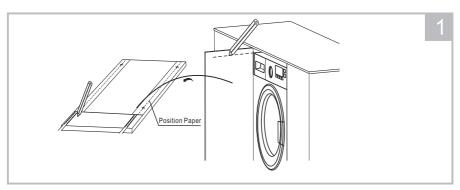


Make the mark on the door

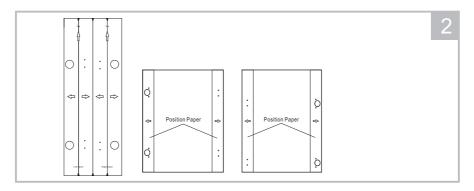


Fixed position paper on the door.

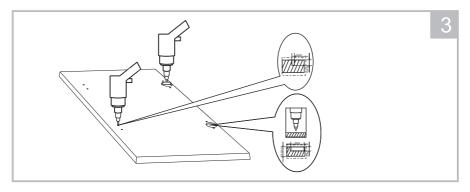


Drill hole on the door

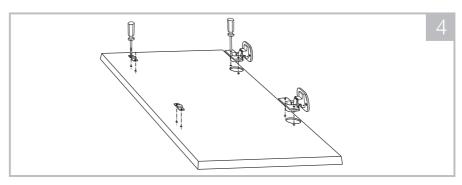

Installation the hinges and spacer

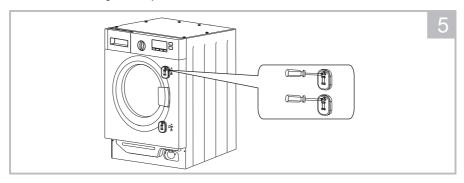

Installation the counter magnet

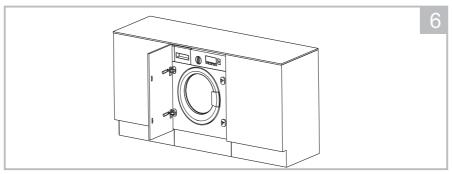

Installation the door

⚠ Warning!

When installing the appliance into the kitchen ensure furniture, if possible, the hoses are
placed in either of the two recesses on the back of the appliance. This will help to prevent
the hoses from becoming kinked or trapped.

cataC



CATA ELECTRODOMÉSTICOS, S.L.
C. del Ter, 2 - 08570 TORELLÓ (Barcelona) SPAIN
Tel. +34 938 594 100 - Fax +34 938 594 101
www.cnagroup.es - e.mail: cna@cnagroup.es

Atención al Cliente: 902 410 450 SAT Central Portugal: 214 349 771 - info@cnagroup.es- service@junis.pt